

Procedure of programming operates by remote control WP 3120

- For the remote controls and the keyboards, it is possible to choose the position of the zone. -
REMOTE CONTROLS AND KEYBOARDS:

3 - To connect it peripheral to the cable of programming. The power station recognizes the peripheral automatically and visualizes it on the display by indicating the zone and the position (the power station indicates the first free position). The display visualizes Zone Operates by remote control No. (E.g.: Télécommande Zone Operates by remote control No 1).

4 - If the Position indicated is appropriate to you, to press on the button have remote control or on key ANTI-VIOLATION of the keyboard and to wait until the power station emits a long beep and that the display visualizes "**Coding ok**" what confirms that coding was carried out.

CONFIGURATION OPERATES BY REMOTE CONTROL OR KEYBOARD:

4 - If the position indicated is not appropriate, it is possible to modify it by pressing several times on the button "has" power station until the display visualizes the desired position.

5 - To press on the key has remote control or on key ANTI-VIOLATION of the keyboard and to wait until the power station emits a long beep and that the display visualizes "**Coding ok**" what confirms that coding is correct.

6 - To disconnect the peripheral. to repeat the procedure of item 3 to code a new peripheral