

## **PROGRAMMING YOUR REMOTE**

### **HORMANN BLUE BUTTONS (868MHZ)**


In order for your new remote to work, you must programme it.

#### **Important notice:**

Programming your remote will cause the door to open. To avoid an accident, we recommend programming your remote from inside your garage.

#### **To programme your new remote, follow these steps:**

- 1- In one hand, take a remote that has already been programmed. Hold down the first button.
- 2- In the other hand, take the new remote and place the two remotes side by side.
- 3- Hold down the same button on the new remote.  
The light on your new remote will flash slowly for 4 seconds, and then more quickly, indicating that the operation has been successful. Release the buttons on both remotes.
- 4- Repeat these steps for each button on the remote.
- 5- Verify that your new remote is working correctly.

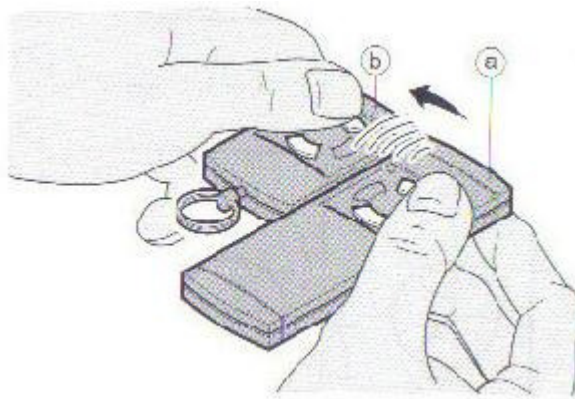

#### **You can also programme your remote using your receiver.**

**ATTENTION: this will delete all remotes previously registered with the receiver!!**

- 1- Press the button inside your receiver. The light on the receiver will switch on and flash slowly.
- 2- Take your new remote and hold one button down. The light on the receiver will flash more quickly while you are holding the button down on the remote.
- 3- Release the button on the remote, the light on the receiver will flash for a few seconds and then will go out.
- 4- Test your new remote.