

## Programming Manual

### ALLMATIC BRO2WN - BRO4WN



Programming with the receiver :



1. Open the casing of your receiver. It is located under the motor cover, or in a control box.
2. Press the program button P on the receiver and release the button.
3. The LED L lights up on the receiver.
4. While the LED on the receiver is lit, press and hold the button on the new remote control that is to be stored.
5. The LED on the receiver will flash twice and then goes out. Release the button on the remote.
6. Your new remote control is now programmed.