


# Programming Manual

## DITEC Go4

### Programming of your new remote control :


There are several methods for programming your new remote control.

### From the receiver:

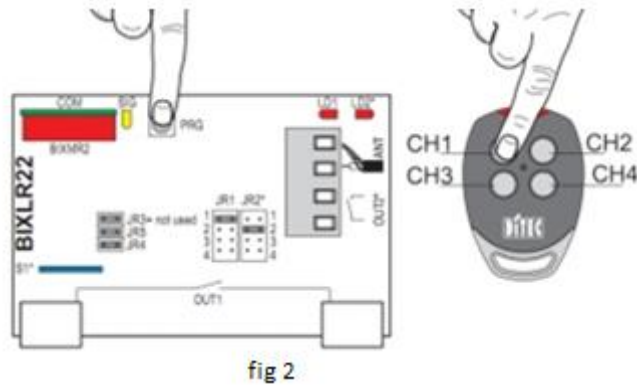

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button (PRG). The LED light on the receiver illuminates continuously. Release the button.
3. Press a button on your new remote control. Keep it pressed down about 2 seconds. The LED light of the receiver blinks and then remains lit fixedly. Let the button go.
4. Your new remote control is programmed.

### From a remote control that has already been programmed (only valid if you have a functional DITEC GOL4):

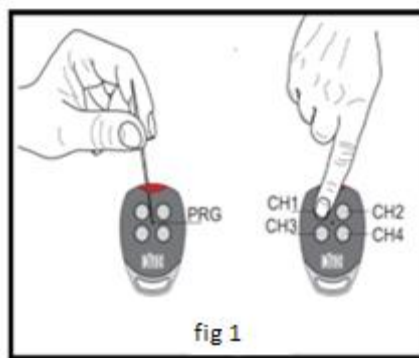

1. Next to your receiver, approach an already-programmed remote control and your new remote control.
2. With a sharply pointed object, press the hidden button on your already-programmed remote control (fig 1, PRG). Keep it pressed down. Wait 5 seconds. The LED light on your receiver illuminates. Release the button.
3. Press a button on your new remote control. Release it.
4. Wait 10 seconds.
5. Your new remote control is programmed.