


Programming Manual

NICE TT2N

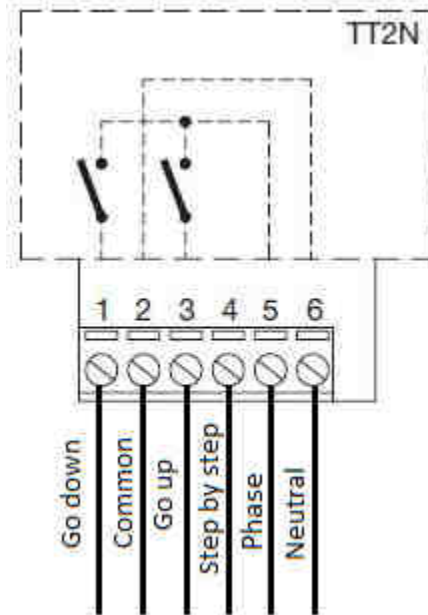

Connection of your receiver:

1. Unplug your motor
2. Make the following connections with the electrical wires as indicated in the diagram above:
 - Terminal 1 corresponds to go down
 - Terminal 2 corresponds to common
 - Terminal 3 corresponds to go up
 - Terminal 4 corresponds to step by step
 - Terminal 5 corresponds to phase
 - Terminal 6 corresponds to neutral
3. Your receiver is connected.