



Programming Manual

RIB Sun 2CH 433 MHz

Programming of your new remote control:

There are several methods for programming your new remote control.

Remote-to-remote programming:

1. Open the casing of your already-programmed remote control.
2. On the circuit board of your already-programmed remote control, you will see a row of small numbered programmable switches. They are in the ON or OFF position. The positioning of these small programmable switches represents your system code.
3. Press the left button on your new remote control. Let it go.
4. In the next 5 seconds, press the right button on your new remote control. Keep it pressed down for 5 seconds. The LED on your new remote control illuminates. Wait 5 seconds. It turns off.
5. Enter your system code in the following manner :
 - The left button of your new remote control corresponds to the OFF position of the switches
 - The right button of your new remote control corresponds to the ON position of the switches

Please note: for certain models, the buttons are swapped. The left button will correspond to the ON position and the right button to OFF.

6. Wait 10 seconds.
7. Your new remote control is programmed.

Receiver-based programming:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, you will see a row of small programmable numbered switches. They are in the ON or OFF position. The positioning of these small programmable switches represents your system code.
3. Press the left button on your new remote control. Let it go.
4. In the following 5 seconds, press the right button on your new remote control. Keep it pressed down for 5 seconds. The LED light on your new remote control illuminates. Wait 5 seconds. It turns off.
5. Enter your system code in the following manner :
 - The left button of your new remote control corresponds to the OFF position of the switches
 - The right button of your new remote control corresponds to the ON position of the switches

Please note: for certain models, the buttons are swapped. The left button will correspond to the ON position and the right button to OFF.

6. Wait 10 seconds.
7. Your new remote control is programmed.