

Programming Manual

SOMFY 40.680 MHz 4K - 26.975MHz 4K



Programming of your new remote control:

There are several methods for programming your new remote control

Remote-to-remote programming:

1. Open the casing of your already-programmed remote control.
2. You will see a row of small programmable numbered switches. They are in the ON or OFF position.
3. Open the casing of your new remote.
4. You will see a row of small programmable numbered switches.
5. Set them in the same way as those set in your already-programmed remote control.
6. Your new remote control is programmed.

Receiver-based programming:

7. Open the casing of your receiver. It is located next to your motor.
8. On the receiver circuit board, you will see a row of small programmable numbered switches. They are in the ON or OFF position.
9. Open the casing of your new remote.
10. You will see a row of small programmable numbered switches.
11. Set them in the same way as those set in the receiver.
12. Your new remote control is programmed.

Please note: certain remote controls contain one or two pair of supplementary internal programmable switches which are separate from the main row. These switches must also be set in the same position as those found in the remote control that is already programmed.

Remarks :

- To replace a remote control with 1 button with a new remote control with 4 buttons, your new remote control has more programmable switches than your already-programmed remote control. You must set the first switches in your new remote control in the same way as those set in your already-programmed remote control. And then place the additional switches in position OFF or 0.
- If these methods do not work, retry by reversing the positioning of the small programmable switches with regard to the receiver or to your already-programmed remote control.