

Programming Manual

NICE Smilo SM2 - Smilo SM4

Programming of your new remote control:

There are several methods for programming your new remote control

Remote-to-remote programming:

1. Approach your motor so you are standing a few feet away from it.
2. Press a button on your new remote control for 5 seconds.
3. Slowly press a button that has already been programmed three times while waiting one second between each press. Each press lasts one second.
4. Press a button on your new remote control. Let it go.
5. Wait 10 seconds.
6. Your new remote control is programmed.

Receiver-based programming:

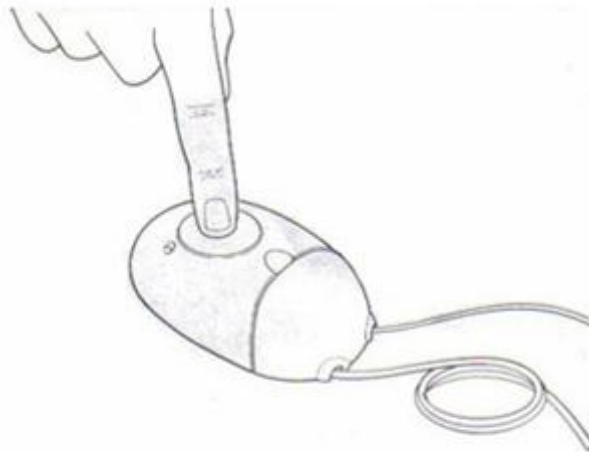


fig 1

1. Approach your receiver. It is located next to your motor.
2. On your receiver, press the programming button (fig 1). Keep it pressed down.
3. The LED light on the receiver illuminates. Let the button go.
4. During the following 10 seconds, press a button on your new remote control for 2 seconds.
5. The LED light on the receiver blinks three times.
6. Wait 10 seconds.
7. Your new remote control is programmed.