


Programming Manual

Hörmann HE1 – HE11

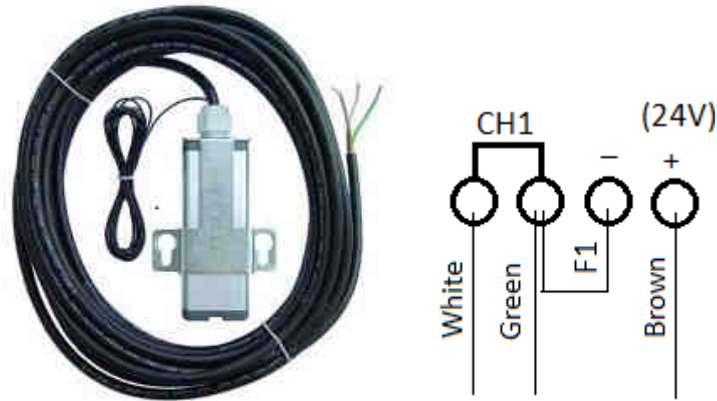

Connection of your receiver:

1. Unplug your motor
2. Check that your receiver is supplied with a 12V or 24V power supply. If the voltage delivered by the circuit board of your motor is greater (for example, 220V), you will have to install a transformer.
3. Strip the sheath of the wire of the receiver. You will see 3 colored wires (brown, green, white), that you will strip too.
4. Make the following connections with the electric wires as indicated in the diagram above:
 - Connect the green and white wires between the terminals CH1 on the motor (you have to insert the wire in the hole under the screws and then screw them to lock the wire)
 - Connect the brown wire to the terminal + of the motor (or terminal 24V).
 - Connect another similar electric wire (F1) to terminal CH1 where you inserted the green wire and the – or GMD terminal on the motor.
5. Your receiver is connected.